

Premier Product Guide

All Products in the range are:

- Manufactured using Robust Polyethylene construction
- IP65 rated
- Supplied with Infra-red remote control

Instructions for Use:

Before use the product should be fully charged using the dedicated charger (supplied). Connect the charger to the unit via the socket on the base of the unit, ensuring that the unit is switched off during charge time. When the product is fully charged, remove the charger and replace the power charge plug cover to prevent water ingress. If required, the charger can remain connected in order to run the unit for longer periods but will not charge while switched on.

- To turn the unit on or off either use the button on the base of the unit or the dedicated remote control (supplied).
- The play/pause switch on the base of the unit controls basic colour changing functions. Press once to start a smooth spectrum colour fade—press again to hold any particular colour. The unit will then remain on this colour until the button is pressed again.
- For greater control, use the infra-red remote control supplied with unit.

Infra-red remote functions

- On/off control
- Brightness control
- Manual selection of 16 colours
- FLASH—7 colour snap change, variable speed controlled via brightness buttons
- STROBE—White pulse at variable speeds controlled via brightness buttons
- FADE—7 colour pulse, variable speed controlled via brightness buttons
- SMOOTH—A gradual 7 colour cross fade, transition speed controlled via brightness buttons

Battery Life Guide

<u>Code</u>	<u>Item</u>	<u>Charge Time</u>	<u>Run Time</u>
PREM-006	LED Cube	5-6 Hours	8-10 Hours
PREM-010	LED Cube (with cushion)	5-6 Hours	8-10 Hours
PREM-024	LED Bubble Chair	5-6 Hours	8-10 Hours
PREM-025	LED Curved Bench	5-6 Hours	8-10 Hours
PREM-034	LED Bar Straight (Cupboard section)	5-6 Hours	8-10 Hours
PREM-035	LED Bar (Corner section)	5-6 Hours	8-10 Hours
PREM-036	LED Bar (Speed-well section)	5-6 Hours	8-10 Hours
PREM-038	LED Curved Bar section	5-6 Hours	8-10 Hours
PREM-066	20cm LED Sphere	5-6 Hours	8-10 Hours
PREM-069	40cm LED Sphere	5-6 Hours	8-10 Hours
PREM-071	60cm LED Sphere	5-6 Hours	8-10 Hours
PREM-107	LED Arrows	5-6 Hours	8-10 Hours
PREM-112	LED Christmas Tree (small)	5-6 Hours	8-10 Hours
PREM-113	LED Christmas Tree (large)	5-6 Hours	8-10 Hours
PREM-119	LED Champagne Ice Bucket	5-6 Hours	8-10 Hours
PREM-123	LED Large Ice Bucket	5-6 Hours	8-10 Hours
PREM-172	LED Poseur Table	5-6 Hours	8-10 Hours
PREM-174	LED Round Plinth	5-6 Hours	8-10 Hours
PREM-181	LED Mini Champagne Poseur Table	5-6 Hours	8-10 Hours
PREM-184	LED Bar Chair	5-6 Hours	8-10 Hours

Safety Advice

In order to reduce the risk of fire, electric shock or injury the following basic safety precautions should be followed:

- This product contains no serviceable parts—do not dismantle.
- Do not immerse this product in water or any other liquid.
- This product is not intended for use by children.
- This product contains a sealed re-chargeable battery that must be disposed of correctly or recycled.

Warranty

This product carries a 1 year warranty from the date of purchase subject to the following conditions:

- This warranty is only valid for products used in accordance with the manufacturer's instructions.
- This product must not be modified or changed in any way. Any such modifications will invalidate this warranty.
- Connection must be made to the correct voltage requirements.
- Proof of purchase will be required in order to validate warranty.
- No responsibility or liability is accepted for any direct or consequential damage, loss or other expense arising from misuse, or incorrect installation or operation of this appliance.

BATTERY CARE

This product is fitted with a re-chargeable battery and the following guidelines should be followed in order to prolong its life.

Charging The re-chargeable battery in this Premier product may contain a small charge when it leaves the factory. However, before first use the battery should be fully charged in accordance with the operating instructions. Failure to do so will seriously affect the performance of the battery. **NOTE: THE UNIT MUST NOT BE SWITCHED ON WHILST CHARGING IS IN PROGRESS.**

Use Wherever possible, units should be allowed to fully discharge before re-charging. Ensure that the weather cap is replaced after charging and that the base of the unit is not immersed in liquid. Failure to do so will allow moisture ingress and damage the batteries and the unit itself.

Storage It is extremely important that units are not stored with fully discharged batteries—THIS WILL SERIOUSLY IMPARE FUTURE PERFORMANCE AND MAY EVEN PREVENT FURTHER CHARGING. Before storage, units should be fully charged and the mains charging cable should be removed. If units are to be stored for a significant time, they should be switched on periodically, allowed to discharge and then re-charged. This will ensure optimum battery performance. Units should preferably be stored in cool, dry conditions but certainly not below freezing or above 50° C